

Universalanzeige UA964802

User Manual

Version 1.0



Table of contents

| | | |
|------|--|----|
| 1 | Safety guide lines | 6 |
| 2 | Model identification | 6 |
| 3 | Technical Data | 7 |
| 3.1 | General data | 7 |
| 4 | Hardware data | 7 |
| 4.1 | Software data | 8 |
| 5 | Dimensions and Installation | 9 |
| 6 | Electrical wirings | 9 |
| 6.1 | Wiring diagram | 10 |
| 7 | Display and Key Functions | 14 |
| 7.1 | Keys | 14 |
| 7.2 | Display | 14 |
| 8 | Controller Functions | 16 |
| 8.1 | Memory Card (optional) | 16 |
| 8.2 | Modifying alarm thresholds | 16 |
| 8.3 | Latch on function | 17 |
| 8.4 | Digital input functions | 18 |
| 8.5 | Peak values | 19 |
| 8.6 | Totalizer function | 19 |
| 8.7 | Sum function | 20 |
| 8.8 | Customizable linear input | 20 |
| 8.9 | Alarm Intervention Modes | 21 |
| 8.10 | Data logger | 23 |
| 9 | Serial communication | 24 |
| 10 | Configuration | 28 |
| 10.1 | Modifying configuration parameters | 28 |
| 10.2 | Loading default values | 28 |
| 11 | Table of configuration parameters | 29 |
| 11.1 | Analogue input | 29 |
| 11.2 | V/I custom | 33 |
| 11.3 | Alarm 1 | 37 |

| | |
|-------------------------------------|----|
| 11.4 Alarm 2..... | 39 |
| 11.5 Display..... | 41 |
| 11.6 Digital input 1..... | 42 |
| 11.7 Digital input 2..... | 43 |
| 11.8 Graphic..... | 43 |
| 11.9 Analogue output in mA | 44 |
| 11.10 Analogue output in Volt | 45 |
| 11.11 Communication port..... | 46 |

Introduction

Thanks for choosing a Pixsys device.

UA964802 is an indicator/panel meter for acquisition and retransmission of processes, also with fast transient. It is provided with relay outputs for alarm purpose, analogue outputs for retransmission of process/setpoints and programmable digital inputs.

Available in standard format 96x48mm, the device can be configured both for horizontal and vertical mounting.

Distinctive feature is the intuitive multilingual interface and a 128x64 pixel graphical OLED display (monochrome yellow).

Visualization options include bargraph and process trend with programmable sampling time. Software features include mathematical functions related to process value like Totalizer and Sum.

Serial connectivity relies on RS485 and Modbus-RTU protocol.

1 Safety guide lines

Read carefully the safety guidelines and programming instructions contained in this manual before using/connecting the device. Disconnect power supply before proceeding to hardware settings or electrical wirings.

Only qualified personnel should be allowed to use the device and/or service it and in accordance to technical data and environmental conditions listed in this manual. Do not dispose electric tools together with household waste material. In observance European Directive 2002/96/EC on waste electrical and electronic equipment and its implementation in accordance with national law, electric tools that have reached the end of their life must be collected separately and returned to an environmentally compatible recycling facility.

2 Model identification

Model 24..230 Vac/Vdc +/-15% 50/60 Hz – 8 VA

| | |
|-----------------|--|
| UA964802 | 2 relays 2 A + 1 out V + 1 out mA + 2D.I. + RS485 + OLED + Rfid |
|-----------------|--|

3 Technical Data

3.1 General data

| | |
|-----------------------|---|
| Display | 2.42" monochrome (yellow) OLED graphical display |
| Operating temperature | Temperature 0-40 °C - Humidity 35..95 uR% |
| Sealing | IP54 front panel (with gasket) - IP20 box and terminals |
| Material | Box: polycarbonate V0 |
| Weight | Approx. 165 g |


4 Hardware data

| | | |
|-----------------|---|--|
| Power supply | Extended power supply 24..230 Vac/Vdc $\pm 15\%$ 50/60 Hz | Consumption: 8 VA. |
| Analogue input | AN1 Configurable via software. Thermocouple type K, S, R, J, T, E, N, B. Automatic compensation of cold junction from 0..50 °C. Thermoresistance: PT100, PT500, PT1000, Ni100, PTC1K, NTC10K (β 3435K). Input V/I (linear): 0-10 V, 0-20, 4-20 mA, 0-60 mV. Potentiometer input: 6 K Ω , 150 K Ω . | Tolerance (25 °C) $\pm 0.2\% \pm 1$ digit (F.s.) for thermocouple, thermoresistance and V / mA. Cold junction accuracy 0.1 °C/°C. Impedance: 0-10 V: Ri > 110 K Ω 0-20 mA: Ri < 5 Ω 4-20 mA: Ri < 5 Ω 0-60 mV: Ri > 1 M Ω |
| Relay outputs | 2 Relays | Contacts 2 A - 250 V~. Resistive charge. |
| Analogue output | 1 tension Linear 0..10 Volt. 1 current Configurable as output 0..20mA or 4..20mA. | All 16bit $\pm 0.2\%$ (F.s.) |

4.1 Software data

| | |
|-------------------------|--|
| Regulation algorithms | ON/OFF with hysteresis |
| Alarm mode | Absolute / Threshold, Band with instantaneous/delayed/retentive action/by digital input activation, Sensor failure / Activation by serial line |
| Sum Function | By digital input or by keyboard it is possible to sum different process measurements over time |
| Totalizer Function | Visualisation of instant process value and total value since last reset |
| Trend visualization | Trend visualisation up to 59 samples, with selectable time basis 1 to 3600s |
| Analogue retransmission | Process values / Setpoints |
| Digital transmission | Process values / Setpoint / Parameters via RS485 |
| Latch-on function | Semi-automatic setting of limits/ calibration values for analogue input |
| Data logging function | Selectable time basis 1s to 3600s, tot. memory 2.5k words |
| Text menus | English/Italian/Deutsch/French/Spanish |

5 Dimensions and Installation

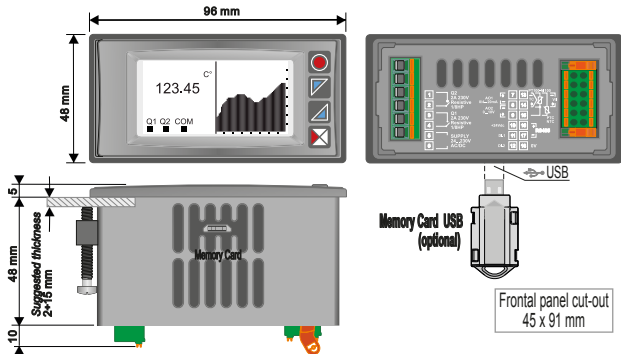

6 Electrical wirings




Although this controller has been designed to resist noises in an industrial environment, please notice the following safety guidelines:

- Separate control lines from the power wires.
- Avoid the proximity of remote control switches, electromagnetic meters, powerful engines.
- Avoid the proximity of power groups, especially those with phase control.


For permanently connected equipment:

- supply wiring must be ≥ 18 Awg with cables suitable for temperatures > 70 °C;
- for requirements about any external switch or circuit-breaker see EN 61010-1 par. 6.11.3.1 and about external overcurrent protection devices see EN 61010-1 par. 9.6.2; the switch or circuit-breaker must be near the equipment.

6.1 Wiring diagram

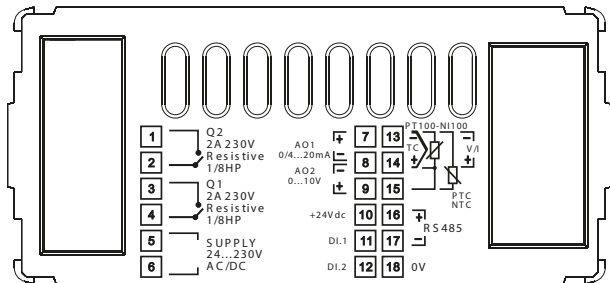

 
6.1.a Power supply



Switching supply with extended range 24...230 Vac/dc
 $\pm 15\%$ 50/60Hz – 8 VA (galvanic isolated)

6.1.b AN1 analogue input

 
For thermocouples K, S, R, J, T, E, N, B.



- Comply with polarity.
- For possible extensions, use a compensated wire and terminals suitable for the thermocouples used (compensated).
- When shielded cable is used, it should be grounded at one side only.



For thermoresistances PT100, NI100.

- For the three-wire connection use wires with the same section.
- For the two-wire connection short-circuit terminals 14 and 15.
- When shielded cable is used, it should be grounded at one side only.

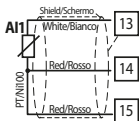

For thermoresistances NTC, PTC, PT500, PT1000 and linear potentiometers.

  When shielded cable is used, it should be grounded at one side only to avoid ground loop currents.




For linear signals V / mA.

- Comply with polarity.
- When shielded cable is used, it should be grounded at one side only.

6.1.c Example of connection for linear input Volt and mA

 PRESSURE TRANSMITTER/
SENSORE DI PRESSIONE




For linear signals 0/4..20 mA with three-wire sensor.

Comply with polarity:

A= Sensor output (+)


B= Sensor ground (-)

C= Sensor power supply (+24 Vdc / 35mA)

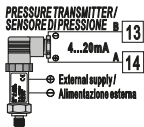

For linear signals 0/4..20 mA with external power of sensor.


Comply with polarity:
A= Sensor output (+)
B= Sensor ground (-)

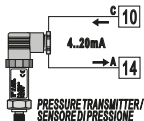

For linear signals 0/4..20 mA with two-wire sensor.


Comply with polarity:
A= Sensor output
C= Sensor power supply (+24 Vdc / 35mA)

 6.1.d Serial input




RS485 Modbus RTU communication

 6.1.e Relay Q1 output




Capacity:
2 A / 250 V~ for resistive loads.
NB: see picture below

 6.1.f Relay Q2 output




Capacity:
2A/250 V~ for resistive loads.
NB: see picture below

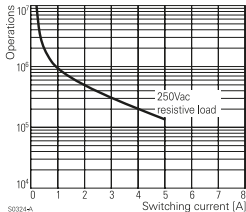


Electrical endurance Q1 / Q2.



2 A, 250 Vac, resistive load, 10^5 operations.
 20/2 A, 250 Vac, $\cos\phi = 0.3$, 10^5 operations.

6.1.g mA / Volt output

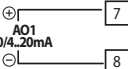

Pins 7-8: linear output in **mA** configurable using parameters as retransmission of process or alarm setpoints (see par. 112-116).


Pins 8-9: linear output in **Volt** configurable using parameters as retransmission of process or alarm setpoints (vedi par. 119-123).

6.1.h Digital Input 1

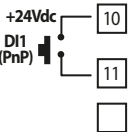

DI1 (PnP) PNP digital input
 Digital input according to parameter 95
 Short-circuits pins 10 and 11 to activate the digital input 1

6.1.i Digital input 2

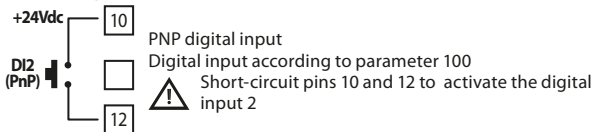

7 Display and Key Functions

7.1 Keys

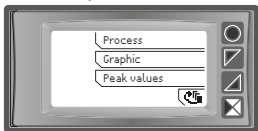


Keys are multifunction: in correspondence of each key its meaning is displayed. If no description is showed, press a key to visualize it. Some menus will be only displayed, when activated.

7.2 Display


It visualizes the process, the setpoints and all configuration parameters. The programming/ operation interface with text menus in 5 languages makes the navigation intuitive.




At first starting, display shows the language selection.

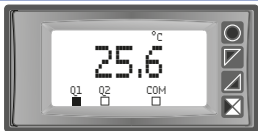

This page displays the process, the relays status and the serial communication (if available).

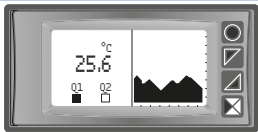

This page displays the process, the relays status and a graph representing the process trend.

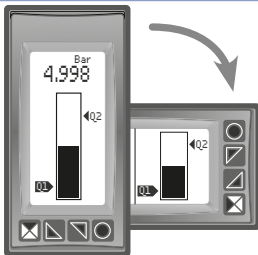

This page displays the process and its graphic representation as bargraph.

8 Controller Functions

8.1 Memory Card (optional)

Parameters and setpoint values can be duplicated from one controller to another using the Memory card.

Insert memory card when the controller is off. On activation, after startup, the display visualizes “Load data” and “Esc” in correspondence of the relative keys (only if the correct values are saved in the memory card). Pressing “Load data” the controller loads the new values. Pressing “Esc” the device keeps the old values.




Updating Memory Card.

To update the memory card values, follow the procedure described on first mode, pressing “Esc” so as not to load the parameters on controller. Enter configuration and change at least one parameter. Exit configuration. Changes are stored automatically.

8.2 Modifying alarm thresholds

Selecting one or more absolute/ band alarms, it is possible to modify the intervention thresholds directly by the user menu, without entering configuration.

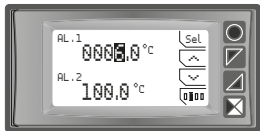

Press “Setpoint” to enter the thresholds modification.

For the modification procedure refer to the following table:

| | Press | Display | Do |
|---|-------|--------------------------------------|--|
| 1 | “Sel” | Selects the setpoint to be modified. | Press e to modify the value. Pressing it is possible to modify digit per digit. |

| Press | Display | Do |
|---------|---|--------------------------------|
| 2 "Sel" | Selects the next setpoint (if active), otherwise go to point 3. | See point 1. |
| 3 "Sel" | ⤴ and ⤵ disappear | Press "Esc" to exit procedure. |

8.3 Latch on function

For the use with input Potentiometers max.6 kohm and Pot.max.150 kohm and with linear input (0..10 V, 0..60 mV, 0/4..20 mA), it is possible to associate the start value of the scale (par. 4 **Lower limit V/I**) to the minimum position of the sensor and the value of end scale (par. 5 **Upper limit V/I**) to the maximum position of the sensor.



To use the LATCH ON function: enter configuration, select **Setting** on par. 8 **Latch on** and press "Sel" (UA964802 shows the page in the picture).

For the calibration procedure refer to the following table:

| Press | Display | Do |
|-------|-----------------------------|---|
| 3 ⤴ | Set the value to maximum. | To exit standard procedure press "Esc". For zero settings place the sensor on the zero point Place the sensor on minimum operating value (associated with Lower limit V/I). |
| 1 | | |
| 2 ⤵ | Set the value on minimum. | Place the sensor on maximum operating value (associated with Upper limit V/I). |
| 4 "0" | Set the virtual zero value. | Press "Esc" to exit procedure. |



8.4 Digital input functions


On the UA964802 model, digital inputs can be enabled by configuring the par. 95 **Digital input 1** and the par. 100 **Digital input 2**.

- **Run:** allows the action of relays and linear output.
- **Hold:** locks the conversion.
- **Tare zero (AI):** selects to zero the process value (tare function).
- **Alarm reset:** if one or more alarms are selected with manual reset and alarm conditions are no longer present, closing the digital input it is possible to restore the alarm output.
- **Totalizer reset:** if the totalizer function is active, using the digital input it is possible to reset the counter.
- **Peaks reset:** min. peak/max. peak/peak-to-peak values are reset.
- **Sum total:** if the sum function is active, using the digital input it is possible to increase the "sum" counter as indicated by the process value.
- **Sum reset:** if the sum function is active, using the digital input it is possible to reset the "sum" counter.
- **Config.lock:** if the digital input is active it is not possible to enter configuration or to modify the setpoints.

Selecting **Digital input 1** or **Digital input 2** on the alarm parameters, the related relays will activate together with the digital input; functions selected on parameters 95 and 100 will continue to work.

To store value in eeprom, see parameter **11 Store**.

8.5 Peak values

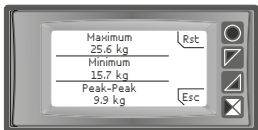

The UA964802 is provided with a page for the visualization of peak values: max. peak, min. peak and peak-to-peak of analogue input. Keeping pressed "*Rst*" it is possible to reset the visualized values.

8.6 Totalizer function

The totalizer function, which can be enable by par. 9 **Totalizer**, performs an instant measurement of the process and sums it on a time basis to the previously totalized value.



On the dedicated page it is possible to see the instant process value and the totalized value: keeping pressed "*Rst*" it is possible to reset this value.

Ex.: if a sensor 4..20mA with F.s. 9000m³/hour is connected, it is necessary to select **Hour** on par. 9 **Totalizer**. The device will increase the totalized value considering the m³ flowing each second (2.5m³). To store value in eeprom, see parameter 11 **Store**.

8.7 Sum function

The sum function, which can be enabled by par. 10 **Sum function**, allows to increase a counter adding the process value on command. It is an application typical for weighing systems and allows to know the total weighed value.



Press **"Sum Function"** to enter the function page. Pressing **"+"** the **Process** value is added to the counter. It is possible to reset the total value keeping pressed **"Rst"** and to fix **"tare zero"** of the process pressing **"Tar"**.

Functions tare, sum and reset can be managed also by digital input if enabled on par. 95 **Digital Input 1** and par. 100 **Digital Input 2**.

To store value in eeprom, see parameter 11 **Store**.

8.8 Customizable linear input

Selecting **16 steps** on par. 17 **V/I custom** and connecting a linear sensor it is possible to customize the linear input for a max. of 16 steps. On parameters **xx-Input value** it is necessary to enter the value of the input to which the value selected on the corresponding parameter **xx-Custom value** will be related.

Example: sensor 0-10V.

01-Input value => 0.000V

01-Custom value=>0mBar

02-Input value => 2.000V

02-Custom value=>100mBar

03-Input value => 5.000V

03-Custom value=>500mBar


04-Input value => 10.000V

04-Custom value=>1000mBar

At each value in volt (input) it is related a value in mBar (customized): if the sensor supplies 2V the device visualizes 100mBar, if it supplies 5V the device visualizes 500mBar. For intermediate tension values the value in mBar is calculated linearly between the entered values containing it: 1V = 50mBar, 3.5V=300mBar and 7V=700mBar.


8.9 Alarm Intervention Modes

8.9.a Absolute alarm (absolute selection)

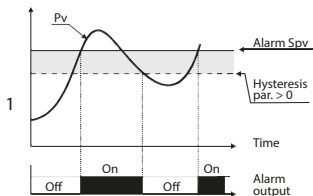

Absolute alarm and hysteresis value greater than "0" (Par. 58 **hysteresis** > 0).


N.B. The example refers to alarm 1; the function can also be enabled for alarms 2

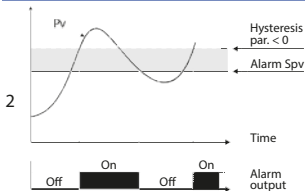

Absolute alarm and hysteresis value less than "0" (Par. 58 **hysteresis** < 0).


N.B. The example refers to alarm 1; the function can also be enabled for alarms 2.

8.9.b Band alarm (band selection)

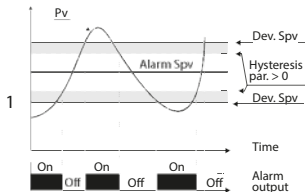

Band alarm and hysteresis value greater than "0" (Par. 58 **hysteresis** > 0).

N.B. The example refers to alarm 1; the function can also be enabled for alarms 2.

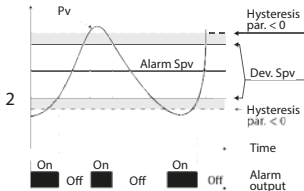

Band alarm and hysteresis value less than "0" (Par. 58 **hysteresis** < 0).
 N.B. The example refers to alarm 1; the function can also be enabled for alarms 2.

8.9.c Digital input alarm (sel. "Digital input 1" or "Digital input 2")

Alarm related to digital input: the relay activates with digital input active.

8.9.d Loop Break Alarm (selection "L.B.A.")

Sensor alarm breakage: the relay activates in case of sensor breakage or sensor out of range.

8.9.e Remote control alarm (selection "remote Ctrl ")

The relay activates writing 1 on word modbus 1015 for the alarm 1 and on word modbus 1016 for the alarm 2. Writing 0 the relay deactivates.

8.10 Data logger

UA964802 implements a basic Data logger function which can be enabled by par. 109 **Data logger**. Right after startup, the device starts storing the process data on EEPROM memory, the sampling time has to be selected on par. 108 **Graphic time**. Data can be read via Modbus starting from address 5001 (see next paragraph) or via wireless reading the Rfid memory directly from address 0x600 (1536). The first data give a reference about the type of saved process values: refer to the following table for the description of the saved data.

| | | |
|--------|------|--|
| 0x600 | 1536 | Data logger: firmware version |
| 0x601 | 1537 | Data logger: sensor type |
| 0x602 | 1538 | Data logger: decimal point |
| 0x603 | 1539 | Data logger: measure unit |
| 0x604 | 1540 | Data logger: sampling time in seconds |
| 0x605 | 1541 | Data logger: end memory flag. 0 indicates that memory still available. 1 indicates that the memory is exhausted and the device resumed saving data from address 5017 |
| | | |
| 0x610 | 1552 | First saved value of analogue input |
| 0x611 | 1553 | Second saved value of analogue input |
| ... | ... | ... |
| 0xFFFF | 4095 | Last saved value of analogue input |

The reading of value 0x8000 (-32768) indicates the end of the saved data: subsequent read data are not valid.

9 Serial communication

UA964802 equipped with RS485 can receive and broadcast data via serial communication using MODBUS RTU protocol. The device can be configured only as a Slave. This function enables the control of multiple controllers connected to a supervisory system. Each controller responds to a master query only if the query contains the same address as that in the parameter par. 126 **Slave address**.

The permitted addresses range from 1 to 254 and there must not be controllers with the same address on the same line.

Address 255 can be used by the master to communicate with all the connected equipment (broadcast mode), while with 0 all the devices receive the command, but no response is expected. UA964802 can introduce a delay (in milliseconds) in the response to the master request. This delay must be set on parameter 129 **Serial Delay**. Each parameter change is saved by the controller on EEPROM memory (100000 writing cycles).

NB: changes made to Words that are different from those reported in the following table can lead to malfunction.

Modbus RTU protocol features

| | |
|-------------------------------------|--------------------------------------|
| Baud-rate | Selection on par. 127 Baud Rate: |
| | 1.200 baud 28.800 baud |
| | 2.400 baud 38.400 baud |
| | 4.800 baud 57.600 baud |
| | 9.600 baud 115.200 baud |
| 19.200 baud | |
| Format | Selection on par. 128 Serial format: |
| | 8, N, 1 (8 bit, no parity, 1 stop) |
| | 8, E, 1 (8 bit, even parity, 1 stop) |
| | 8, O, 1 (8 bit, odd parity, 1 stop) |
| | 8, N, 2 (8 bit, no parity, 2 stop) |
| | 8, E, 2 (8 bit, even parity, 2 stop) |
| 8, O, 2 (8 bit, odd parity, 2 stop) | |





Modbus RTU protocol features

| | |
|---------------------|---|
| Supported functions | WORD READING (max 20 word) (0x03, 0x04) |
| | SINGLE WORD WRITING (0x06) |
| | MULTIPLE WORDS WRITING (max 20 word) (0x10) |

Looking at the table here below it is possible to find all available addresses and functions:

| | | | | | |
|----|-----------|-----|--------------|----|------------|
| RO | Read Only | R/W | Read / Write | WO | Write Only |
|----|-----------|-----|--------------|----|------------|

| Modbus Address | Description | Read Only | Reset value |
|----------------|---|-----------|-------------|
| 0 | Device type | RO | EEPROM |
| 1 | Software version | RO | EEPROM |
| 5 | Slave address | R/W | EEPROM |
| 6 | Boot version | RO | EEPROM |
| 1000 | Process (degrees.tenths for temperature sensors; digit for linear sensors) | RO | 0 |
| 1001 | Min. peak (degrees.tenths for temperature sensors; digit for linear sensors) | RO | 0 |
| 1002 | Max. peak (degrees.tenths for temperature sensors; digit for linear sensors) | RO | 0 |
| 1003 | Peak-to-peak (degrees.tenths for temperature sensors; digit for linear sensors) | RO | 0 |
| 1004 | Totalizer value (H) | RO | EEPROM |
| 1005 | Totalizer value (L) | RO | EEPROM |
| 1006 | Sum value (H) | RO | EEPROM |
| 1007 | Sum value (L) | RO | EEPROM |
| 1008 | Cold junction temperature (degrees.tenths) | RO | EEPROM |
| | Relays status (0 = Off, 1 = On): | | |
| 1009 | Bit 0 = Relay Q1 Bit 1 = Relay Q2 | RO | 0 |

| Modbus Address | Description | Read Only | Reset value |
|----------------|--|-----------|-------------|
| 1010 | Digital inputs status (0 = Off, 1 = Active): Bit 0 = D.I.1 Bit 1 = D.I.2 | RO | - |
| 1011 | Keys status (0 = released, 1 = pressed): Bit 0 =  Bit 1 =  Bit 2 =  Bit 3 =  | RO | 0 |
| 1012 | Error flags Bit 0 = Cold junction error Bit 1 = Process error (sensor) Bit 2 = Eeprom writing error Bit 3 = Eeprom reading error Bit 4 = Missing calibration data error Bit 5 = Generic error Bit 6 = Hardware error | RO | 0 |
| 1013 | Alarms status (0 = None, 1 = Active) Bit 0 = Alarm 1 Bit 1 = Alarm 2 | RO | 0 |
| 1014 | Manual reset: write 0 to reset all alarms. In reading (0 = Not resettable, 1 = Resettable) Bit 0 = Alarm 1 Bit 1 = Alarm 2 | R/W | 0 |
| 1015 | Alarm 1 status (remote control) | R/W | 0 |
| 1016 | Alarm 2 status (remote control) | R/W | 0 |
| 1017 | mA analogue output value (remote control) | R/W | 0 |
| 1018 | Volt analogue output value (remote control) | R/W | 0 |
| 1019 | Run by serial 0 = Inhibited outputs 1 = Active outputs | R/W | 1 |



| Modbus Address | Description | Read Only | Reset value |
|----------------|---|-----------|-------------|
| 1020 | Hold by serial 0 = Active analogue input 1 = Analogue input in Hold | R/W | 0 |
| 1021 | Tare zero AI (write 1) | R/W | 0 |
| 1022 | Totalizer reset (write 1) | R/W | 0 |
| 1023 | Peaks reset (write 1) | R/W | 0 |
| 1024 | Sum total (write 1) | R/W | 0 |
| 1025 | Total sum reset (write 1) | R/W | 0 |
| 2001 | Parameter 1 | R/W | EEPROM |
| 2002 | Parameter 2 | R/W | EEPROM |
| 2150 | Parameter 150 | R/W | EEPROM |
| 4001 | Parameter 1* | R/W | EEPROM |
| 4002 | Parameter 2* | R/W | EEPROM |
| 4150 | Parameter 150* | R/W | EEPROM |

* Parameters modified using serial address 4001 to 4150, will be stored on eeprom only after 10s since last writing of one parameter.

10 Configuration

10.1 Modifying configuration parameters

For configuration parameters see par. 11

| | Press | Display | Do |
|---|---|--|---|
| 1 | "Configuration" | Shows 0000 with the 1st digit selected. | |
| 2 | ⬆ and ⬇ | Changes the selected digit and moves to the next one using  . | Enter password 1234 |
| 3 | "Sel" to confirm | Shows the names of the parameter groups. | |
| 4 | ⬆ and ⬇ | Scroll up / down the parameter groups. | |
| 5 | "Sel" to enter the parameter group | Shows the parameters of the selected group. | Press ⬆ and ⬇ to select parameter to be modified. |
| 6 | "Sel" to enter the parameter modification | Shows all parameter possible selections or the parameter numeric value. | Press ⬆ and ⬇ to modify parameter. For numeric parameters, pressing  it is possible to modify digit-to-digit. Press "Sel" to confirm modification. Press "<" to exit without modify. |

10.2 Loading default values

Enter password 9999 to restore factory settings of the device.

11 Table of configuration parameters

The following table includes all parameters. Some of them will not be visible on the models which are not provided with relevant Hardware data.

11.1 Analogue input

Parameters to configure the analogue input.

1 Sensor type

Analogue input configuration/sensor selection

Thermocouple K (**Default**) -260 °C..1360 °C

Thermocouple S -40 °C..1760 °C

Thermocouple R -40 °C..1760 °C

Thermocouple J -200 °C..1200 °C

Thermocouple T -260 °C..400 °C

Thermocouple E -260 °C..1000 °C

Thermocouple N -260 °C..1280 °C

Thermocouple B +80 °C..1820 °C

Pt100 -200 °C..600 °C

Ni100 -60 °C..180 °C

NTC 10kOhm -40 °C..125 °C

PTC 1kOhm -50 °C..150 °C

Pt500 -100 °C..600 °C

Pt1000 -100 °C..600 °C

0..10 V

0..20 mA

4..20 mA

0..60 mV

Pot. max. 6 kOhm

Pot. max. 150 kOhm

2 Decimal Point

Selects type of the visualized decimal point

| | |
|-------|-----------------------------|
| 0 | No decimals. Default |
| 0.0 | 1 Decimal |
| 0.00 | 2 Decimals |
| 0.000 | 3 Decimals |

3 Measure unit

Selects the visualized measure unit

| | | |
|-----------------------|-------------------|------|
| °C (Default) | kg | N |
| °F | q | kN |
| K | t | % |
| V | oz | L |
| mV | lb | gal |
| A | m/s | mmHg |
| mA | m/m | atm |
| Bar | m/h | mH2O |
| mBar | l/s | Nm |
| psi | l/m | kNm |
| Pa | l/h | kgf |
| mm | m ³ /s | kgp |
| cm | m ³ /m | kip |
| dm | m ³ /h | lbf |
| m | rpm | ozf |
| km | %rh | pcs |
| in | ph | |
| g | | |

4 Lower limit V/I

Range AN1 lower limit only for linear input. Ex: with input 4..20 mA this parameter takes value associated to 4 mA

-32767 + 32767 [digit¹], **Default: 0.**

5 Upper limit V/I

Range AN1 upper limit only for linear input. Ex: with input 4..20 mA this parameter takes value associated to 20 mA

-32767 + 32767 [digit¹], **Default:** 1000.

6 Offset calibration

Value added / subtracted to the process visualization (usually correcting the

value of environmental temperature)

-1000..+1000 [digit¹] for linear sensors and potentiometers.

-100.0..+100.0 (degrees.tenths for temperature sensors). **Default** 0.0.

7 Gain calibration

Percentage value that is multiplied for the process value (allows to calibrated the working point)

-100.0%..+100.0%, **Default:** 0.0

ex: to correct the range from 0..1000°C showing 0..1010°C, set the par. to -1.0.

8 Latch On

Automatic setting of limits for linear inputs and potentiometers. (*see par. 8.3*)

Disabled (**Default**)

Enabled

Setting

9 Totalizer

Visualizes the total **fluid** volume considering the sensor signal as unit/time value (ex. if the connected sensor has an output 4..20mA with F.s. 2000m³/hour, the parameter 9 **Totalizer** has to be selected as **Hour** and the display will visualize the total fluid volume from the last RESET/START signal). (*see par. 8.6*)

Disabled Display visualizes the process (**Default**)

Second Display visualizes the flow in unit/s

Minute Display visualizes the flow in unit/min

Hour Display visualizes the flow in unit/hour

10 Sum function

Enables the sum function and its dedicated page. Allows to sum the process value to a variable. (*see par. 8.7*)

Disabled (**Default**)

Enabled

11 Store

Enables to store in eeprom the values of peak, totalizer, sum function and tare zero. If disabled, at starting the above-mentioned values start from 0. The storing is done automatically every 5 minutes.

Disabled (**Default**)

Enabled

12 Filter samples

ADC Filter: number of input sensor readings to calculate the mean that defines process value. **NB:** when readings increase, control loop speed slows down.

1..15 means **Default:** 10.

13 Sampling frequency

Sampling frequency of analogue / digital converter.

NB: Increasing the conversion speed will slow down reading stability (ex: for fast transients, as pressure, it is advisable to increase sampling frequency)

242 Hz 4.2ms (Maximum speed conversion)

123 Hz 8.2ms

62 Hz 16.1ms

50 Hz 20ms

39 Hz 25.6ms

33.2 Hz 30.1ms

19.6 Hz 51ms

16.7 Hz (**Default**) 59.9ms Ideal for filtering noises 50 / 60 Hz

12.5 Hz 80ms

| | |
|---------|----------------------------------|
| 10 Hz | 100ms |
| 8.33 Hz | 120ms |
| 6.25 Hz | 160ms |
| 4.17 Hz | 240ms (Minimum speed conversion) |

11.2 V/I custom

Parameters to configure the customizable linear input. (*see par. 8.8*)

17 V/I custom

Selects the linearization type for the analogue input if selected as linear.

Lower and upper limits. The input will be linearized by parameters 4 and 5 (Default)

16 spezzate. The input will be linearized by parameter 18-49

18 01-Input value

Defines the input value to which the 1st customized value is assigned
0..20000 **Default:** 0.

19 01-Custom value

Defines the 1st customized value assigned to the input
-32767..32767 [Digit!] **Default:** 0.

20 02-Input value

Defines the input value to which the 2nd customized value is assigned
0..20000 **Default:** 2000.

21 02-Custom value

Defines the 2nd customized value assigned to the input
-32767..32767 [Digit!] **Default:** 1000.

22 03-Input value

Defines the input value to which the 3rd customized value is assigned
0..20000 **Default:** 0.

23 03-Custom value

Defines the 3rd customized value assigned to the input
-32767..32767 [Digit!] **Default:** 0.

24 04-Input value

Defines the input value to which the 4th customized value is assigned
0..20000 **Default:** 0.

25 04-Custom value

Defines the 4th customized value assigned to the input
-32767..32767 [Digit!] **Default:** 0.

26 05-Input value

Defines the input value to which the 5th customized value is assigned
0..20000 **Default:** 0.

27 05-Custom value

Defines the 5th customized value assigned to the input
-32767..32767 [Digit!] **Default:** 0.

28 06-Input value

Defines the input value to which the 6th customized value is assigned
0..20000 **Default:** 0.

29 06-Custom value

Defines the 6th customized value assigned to the input
-32767..32767 [Digit!] **Default:** 0.

30 07-Input value

Defines the input value to which the 7th customized value is assigned
0..20000 **Default:** 0.

31 07-Custom value

Defines the 7th customized value assigned to the input
-32767..32767 [Digit!] **Default:** 0.

32 08-Input value

Defines the input value to which the 8th customized value is assigned
0..20000 **Default:** 0.

33 08-Custom value

Defines the 8th customized value assigned to the input
-32767..32767 [Digit!] **Default:** 0.

34 09-Input value

Defines the input value to which the 9th customized value is assigned
0..20000 **Default:** 0.

35 09-Custom value

Defines the 9th customized value assigned to the input
-32767..32767 [Digit!] **Default:** 0.

36 10-Input value

Defines the input value to which the 10th customized value is assigned
0..20000 **Default:** 0.

37 10-Custom value

Defines the 10th customized value assigned to the input
-32767..32767 [Digit!] **Default:** 0.

38 11-Input value

Defines the input value to which the 11th customized value is assigned
0..20000 **Default:** 0.

39 11-Custom value

Defines the 11th customized value assigned to the input
-32767..32767 [Digit!] **Default:** 0.

40 12-Input value

Defines the input value to which the 12th customized value is assigned
0..20000 **Default:** 0.

41 12-Custom value

Defines the 12th customized value assigned to the input
-32767..32767 [Digit!] **Default:** 0.

42 13-Input value

Defines the input value to which the 13th customized value is assigned
0..20000 **Default:** 0.

43 13-Custom value

Defines the 13th customized value assigned to the input
-32767..32767 [Digit!] **Default:** 0.

44 14-Input value

Defines the input value to which the 14th customized value is assigned
0..20000 **Default:** 0.

45 14-Custom value

Defines the 14th customized value assigned to the input
-32767..32767 [Digit!] **Default:** 0.

46 15-Input value

Defines the input value to which the 15th customized value is assigned
0..20000 **Default:** 0.

47 15-Custom value

Defines the 15th customized value assigned to the input
-32767..32767 [Digit!] **Default:** 0.

48 16-Input value

Defines the input value to which the 16th customized value is assigned
0..20000 **Default:** 0.

49 16-Custom value

Defines the 16th customized value assigned to the input
-32767..32767 [Digit!] **Default:** 0.

11.3 Alarm 1

Parameters to configure the Alarm 1. (*see par. 8.9*)

54 Alarm type

Alarm 1 selection
Disabled (**Default**)
Absolute alarm
Band alarm
Digital input 1
Digital input 2
Sensor failure
Remote control by Modbus

55 Contact type

Selects the alarm 1 output contact and intervention type
Normally open (**Default**)
Normally closed
N.O.-Disabled Power on
N.C.-Disabled Power on

- 56 Alarm threshold**
Selects the alarm 1 setpoint
-32767..+32767 [Digit¹] (degrees.tenths for temperature sensors), **Default:** 0.0.
- 57 Deviation threshold**
Selects the deviation from alarm 1 setpoint for the band alarm
0..+32767 [Digit¹] (degrees.tenths for temperature sensors), **Default:** 0.0.
- 58 Hysteresis**
Alarm 1 hysteresis
-1000..+1000 [Digit¹] (degrees.tenths for temperature sensors), **Default:** 0.0.
- 59 Reset type**
Alarm 1 contact reset type
Automatic: **(Default)**
Manual: Manual reset by keyboard
Manual stored: Keeps relay status also after an eventual power failure
- 60 Error contact**
State of contact for alarm 1 output in case of error
Open **(Default)**
Closed
- 62 Actuation delay**
Alarm 1 delay.
-3600..+3600 seconds. **Default:** 0
Negative: delay in alarm output phase.
Positive: delay in alarm entry phase.
- 63 Lower limit**
Lower limit for alarm 1 setpoint.
-32767..+32767 [Digit¹] (degrees.tenths for temperature sensors). **Default:** 0.

64 Upper limit

Upper limit for alarm 1 setpoint

-32767..+32767 [Digit¹] (degrees.tenths for temperature sensors). **Default:** 1000.

65 Protection

Alarm 1 set protection. Does not allow user to modify setpoint

Free Modification allowed (**Default**)

Lock Protected

Hide Protected and not visualized

11.4 Alarm 2

Parameters to configure the Alarm 2

69 Alarm type

Alarm 2 selection

Disabled (**Default**)

Absolute alarm

Band alarm

Digital input 1

Digital input 2

Sensor failure

Remote control by Modbus

70 Contact type

Selects the alarm 2 output contact and intervention type

Normally open (**Default**)

Normally closed

N.O.-Disabled Power on

N.C.-Disabled Power on

71 Alarm threshold

Selects the alarm 2 setpoint

-32767..+32767 [Digit¹] (degrees.tenths for temperature sensors), **Default:** 0.0.

72 Deviation threshold

Selects the deviation from alarm 2 setpoint for the band alarm
0..+32767 [Digit¹] (degrees.tenths for temperature sensors), **Default:** 0.0.

73 Hysteresis

Alarm 2 hysteresis
-1000..+1000 [Digit¹] (degrees.tenths for temperature sensors), **Default:** 0.0.

74 Reset type

Alarm 2 contact reset type
Automatic: (Default)
Manual: Manual reset by keyboard
Manual stored: Keeps relay status also after an eventual power failure

75 Error contact

State of contact for alarm 2 output in case of error
Open (Default)
Closed

77 Actuation delay

Alarm 2 delay.
-3600..+3600 seconds. **Default:** 0
Negative: delay in alarm output phase.
Positive: delay in alarm entry phase.

78 Lower limit

Lower limit for alarm 2 setpoint.
-32767..+32767 [Digit¹] (degrees.tenths for temperature sensors). **Default:** 0.

79 Upper limit

Upper limit for alarm 2 setpoint
-32767..+32767 [Digit¹] (degrees.tenths for temperature sensors). **Default:**
1000.

80 Protection

Alarm 2 set protection. Does not allow user to modify setpoint

| | |
|------|---|
| Free | Modification allowed (Default) |
| Lock | Protected |
| Hide | Protected and not visualized |

11.5 Display

84 Language

Selects the language

| | | |
|----------------------------|----------|---------|
| English (Default) | Deutsch | Español |
| Italiano | Français | |

86 Contrast

Selects the contrast value for the display

0%..100%, **Default**: 80%.

87 Reverse

Enables the display reverse visualization

Disabled (**Default**)

Enabled

88 Screen timeout

Determines the time after which the display switches to standby mode when no key has been pressed, reducing brightness so as not to be an inconvenience in environments with little lighting and to extend the display's life time.

Always on (**Default**)

| | | |
|------------|------------|------------|
| 15 seconds | 2 minutes | 30 minutes |
| 30 seconds | 5 minutes | 1 hour |
| 1 minute | 10 minutes | |

89 Display direction

Selects the display visualization direction.

Horizontal (**Default**)

Vertical

90 Starting page

Selects the page visualized at starting after the initial splash screen

Process (**Default**)

Graphic

Peak values

Totalizer

Sum function

11.6 Digital input 1

Parameters to configure the digital input 1.

95 Digital input function

Selects the digital input 1 function. (*see par. 8.4*)

Disabled (**Default**)

Run

Hold

Tare zero (AI) (impulse functioning)

Alarm reset

Totalizer reset (impulse functioning)

Peaks reset

Sum total (impulse functioning)

Sum reset (impulse functioning)

Config. lock

96 Contact type

Selects the digital input 1 inactive contact.

Normally open (**Default**) Executes function with closed contact

Normally closed Executes function with open contact

11.7 Digital input 2

Parameters to configure the digital input 2. (see par. 8.4)

100 Input function

Selects the digital input 2 function

Disabled (**Default**)

Run

Hold

Tare zero (AI) (impulse functioning)

Alarm reset

Totalizer reset (impulse functioning)

Peaks reset

Sum total (impulse functioning)

Sum reset (impulse functioning)

Config. lock

101 Contact type

Selects the digital input 2 inactive contact.

Normally open (**Default**) Executes function with closed contact

Normally closed Executes function with open contact

11.8 Graphic

Parameters to configure the trend and bar graph management.

105 Graphic type

Selects the type of graph to be visualized on the relevant page.

Trend (**Default**)

Bar graph

106 Lower limit

Trend or bar graph lower limit.

-32767 + 32767 [Digit!], **Default**: 0.

107 Upper limit

Trend or bar graph upper limit.
-32767 + 32767 [Digit¹], **Default:** 1000.

108 Trend time

Selects the trend sampling time.
1..3600 seconds, **Default:** 60s.

109 Data logger

Enables the over time registration of the process in eeprom
The sampling time is equal to the trend upgrading time. (*see par. 8.10*)
Disabled (**Default**)
Enabled

110 Data logger time

Selects the data logger sampling time.
1..3600 seconds, **Default:** 60s.

11.9 Analogue output in mA

Parameters to configure the analogue output in mA

112 Retransmission

Enables analogue output
Disabled (**Default**)
Process
Alarm 1
Alarm 2
Remote control by Modbus

113 Signal type

Selects the signal for the analogue output in mA
0..20 mA
4..20 mA (**Default**)

114 Lower limit

Analogue output mA lower limit range
-32767..+32767 [Digit¹] (degrees.tenths for temperature sensors), **Default:** 0

115 Upper limit

Analogue output mA upper limit range
-32767..+32767 [Digit¹] (degrees.tenths for temperature sensors) **Default:** 1000

116 Error value

Selects the value of the analogue output in mA in case of error
0 mA (**Default**)
4 mA
20 mA

11.10 Analogue output in Volt

Parameters to configure the analogue output in Volt

119 Retransmission

Enables analogue output
Disabled (**Default**)
Process
Alarm 1
Alarm 2
Remote control by Modbus

120 Signal type

Selects the signal for the analogue output in Volt
0..10 V (**Default**)

121 Lower limit

Analogue output Volt lower limit range
-32767..+32767 [Digit¹] (degrees.tenths for temperature sensors), **Default:** 0

122 Upper limit

Analogue output Volt upper limit range
-32767..+32767 [Digit¹] (degrees.tenths for temperature sensors) **Default:**
1000

123 Error value

Selects the value of the analogue output in Volt in case of error
0 V (**Default**)
10 V

11.11 Comunication port

Parameters to configure the serial communication port. (*see par. 9*)

126 Slave address

Selects the slave address for serial communication
1..254. **Default:** 240

127 Baud rate

Selects the baud rate for serial communication
1.200 baud
2.400 baud
4.800 baud
9.600 baud
19.200 baud (**Default**)
28.800 baud
39.400 baud
57.600 baud
115.200 baud

¹ The decimal point visualization depends on the "Sensor type" and "Decimal point" selection.

128 ComPort setting

Selects the format for the serial communication

| | |
|-------|---------------------------------------|
| 8,N,1 | 8bit, No parity, 1 Stop bit (Default) |
| 8,E,1 | 8bit, Even parity, 1 Stop bit |
| 8,O,1 | 8bit, Odd parity, 1 Stop bit |
| 8,N,2 | 8bit, No parity, 2 Stop bit |
| 8,E,2 | 8bit, Even parity, 2 Stop bit |
| 8,O,2 | 8bit, Odd parity, 2 Stop bit |

129 Serial delay

Selects the serial delay

0..100 milliseconds. **Default:** 10

Notes / Updates

Table of configuration parameters

| | | |
|----|--------------------|----|
| 1 | Sensor type | 29 |
| 2 | Decimal Point | 30 |
| 3 | Measure unit | 30 |
| 4 | Lower limit V/I | 30 |
| 5 | Upper limit V/I | 31 |
| 6 | Offset calibration | 31 |
| 7 | Gain calibration | 31 |
| 8 | Latch On | 31 |
| 9 | Totalizer | 31 |
| 10 | Sum function | 32 |
| 11 | Store | 32 |
| 12 | Filter samples | 32 |
| 13 | Sampling frequency | 32 |
| 17 | V/I custom | 33 |
| 18 | 01-Input value | 33 |
| 19 | 01-Custom value | 33 |
| 20 | 02-Input value | 33 |
| 21 | 02-Custom value | 33 |
| 22 | 03-Input value | 33 |
| 23 | 03-Custom value | 34 |
| 24 | 04-Input value | 34 |
| 25 | 04-Custom value | 34 |
| 26 | 05-Input value | 34 |
| 27 | 05-Custom value | 34 |
| 28 | 06-Input value | 34 |
| 29 | 06-Custom value | 34 |
| 30 | 07-Input value | 34 |
| 31 | 07-Custom value | 35 |
| 32 | 08-Input value | 35 |
| 33 | 08-Custom value | 35 |
| 34 | 09-Input value | 35 |
| 35 | 09-Custom value | 35 |
| 36 | 10-Input value | 35 |

| | | |
|----|---------------------|----|
| 37 | 10-Custom value | 35 |
| 38 | 11-Input value | 35 |
| 39 | 11-Custom value | 36 |
| 40 | 12-Input value | 36 |
| 41 | 12-Custom value | 36 |
| 42 | 13-Input value | 36 |
| 43 | 13-Custom value | 36 |
| 44 | 14-Input value | 36 |
| 45 | 14-Custom value | 36 |
| 46 | 15-Input value | 36 |
| 47 | 15-Custom value | 37 |
| 48 | 16-Input value | 37 |
| 49 | 16-Custom value | 37 |
| 54 | Alarm type | 37 |
| 55 | Contact type | 37 |
| 56 | Alarm threshold | 38 |
| 57 | Deviation threshold | 38 |
| 58 | Hysteresis | 38 |
| 59 | Reset type | 38 |
| 60 | Error contact | 38 |
| 62 | Actuation delay | 38 |
| 63 | Lower limit | 38 |
| 64 | Upper limit | 39 |
| 65 | Protection | 39 |
| 69 | Alarm type | 39 |
| 70 | Contact type | 39 |
| 71 | Alarm threshold | 39 |
| 72 | Deviation threshold | 40 |
| 73 | Hysteresis | 40 |
| 74 | Reset type | 40 |
| 75 | Error contact | 40 |
| 77 | Actuation delay | 40 |
| 78 | Lower limit | 40 |
| 79 | Upper limit | 40 |

| | | |
|-----|------------------------|----|
| 80 | Protection | 41 |
| 84 | Language | 41 |
| 86 | Contrast | 41 |
| 87 | Reverse | 41 |
| 88 | Screen timeout | 41 |
| 89 | Display direction | 42 |
| 90 | Starting page | 42 |
| 95 | Digital input function | 42 |
| 96 | Contact type | 42 |
| 100 | Input function | 43 |
| 101 | Contact type | 43 |
| 105 | Graphic type | 43 |
| 106 | Lower limit | 43 |
| 107 | Upper limit | 44 |
| 108 | Trend time | 44 |
| 109 | Data logger | 44 |
| 110 | Data logger time | 44 |
| 112 | Retransmission | 44 |
| 113 | Signal type | 44 |
| 114 | Lower limit | 45 |
| 115 | Upper limit | 45 |
| 116 | Error value | 45 |
| 119 | Retransmission | 45 |
| 120 | Signal type | 45 |
| 121 | Lower limit | 45 |
| 122 | Upper limit | 46 |
| 123 | Error value | 46 |
| 126 | Slave address | 46 |
| 127 | Baud rate | 46 |
| 128 | ComPort setting | 47 |
| 129 | Serial delay | 47 |



WACHENDORFF

Prozesstechnik GmbH & Co. KG

Wachendorff Prozesstechnik GmbH & Co. KG
Industriestrasse • 65366 Geisenheim

Tel.: +49 (0) 67 22 / 99 65 - 20

Fax: +49 (0) 67 22 / 99 65 - 78

E-Mail: wp@wachendorff.de

www.wachendorff-prozesstechnik.de

© Copyright by Wachendorff Prozesstechnik GmbH & Co. KG